

LED Explanation	Flashing per 1 sec	Flashing per 2 sec	Flashing per 4 sec
	WiFi Connected AC connected	WiFi Connected Inverter Standby	WiFi Connected Inverter Working
	WiFi not connected AC disconnected	Inverter Alert	Inverter Alert
	WiFi not connected AC connected	WiFi not connected Inverter standby	WiFi not connected Inverter working

Before setting up WIFI

DO NOT CONNECT INVERTER AC TO SOCKET

An eight-digit string can be found under the barcode on the sticker
This is the AP Number



From a PC (MAC/WINDOWS) or a smart phone find such Wifi Hotspot in your Wifi list

Connect the Hotspot with password:

12345678






10.10.100.254



WiFi list or type in SSID & Password manually Be aware: only use 2.4GHz WiFi

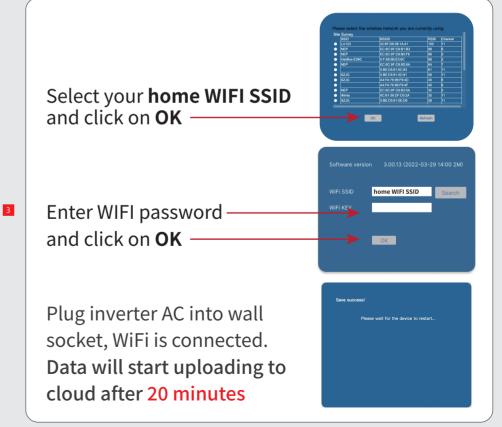

Obtain **NEPViewer** App



Available on the App Store Soogle Play

Search for NEPViewer in App Store or Google Play * Android users can visit user.nepviewer.com for latest version APK file



